

07 3624 3800 P


07 3624 3888 F

admin @cruisemaster.com.au E

352b Bilsen Rd. Geebung QLD 4034 A cruisemaster.com.au W

#### **CUSTOMER INFORMATION SHEET – NO. 05**


# CRUISEMASTER™ DO65

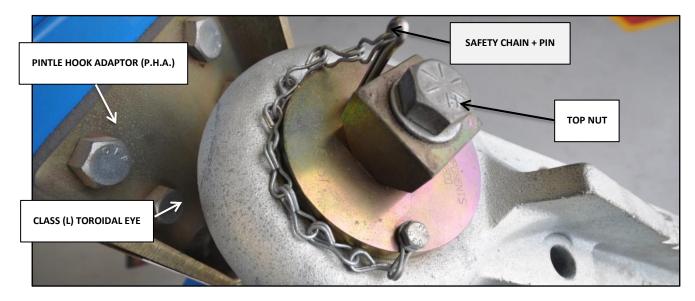



#### METHODS OF ATTACHMENT 1

- D-Rating of 3.5t applies only when fitted to the pintle hook adaptor see (FIGURE 1) - PART NO. 18F XVC017
- In all other fittings, the coupling is rated to 3.5t or towbar rating (FIGURE 2) - whichever is lower
  - Ensure the tow bar rating is suitable for application
  - o Drill a 6mm hole at a radius of 20mm from the pin hole into the tow bar tongue for anti-rotation pin to locate into (FIGURE 3) at a depth of 10mm
- Main 7/8in nut to be torgued to 560 Nm (410 ft/lbs)

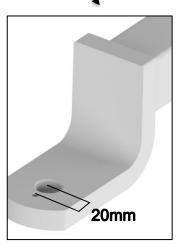

**FIGURE 3 TOW BAR TONGUE** 

CIS-005-DO65-Coupling-Rev88

cruisemaster.com.au



## 2 TRAILER COUPLING

- To be used with class (L) toroidal drawbar eyes only.
- Swivel type couplings should not be used without anti swivel plate 18B-9304 (Available Separately).
- Ensure that the ring does not foul any part of the coupling.



## **3 CONNECTION**

18B-9304

PLATE

- Top nut should be firmly tightened with supplied spanner, always fit safety locking pin.
- Keep fingers clear of the hitch when coupling / uncoupling.
- Ensure the weight of the drawbar is taken on the jockey wheel when coupling / uncoupling.

# **MAINTENANCE & SAFETY**

- 1. Keep hands and fingers clear of coupling when attaching.
- 2. Ensure trailer safety chains are attached whilst coupling or uncoupling.
- 3. Lubricate the coupling regularly using grease nipple on base.
- 4. Replace boot if torn or damaged (PART NO. 18F XVC 200).
- 5. Ensure the safety pin and chain is always fitted and in good condition.
- 6. Check all bolts regularly for tightness.
- 7. Do not use Coupling for recovery purposes.





CIS-005-DO65-Coupling-Rev88