




CUSTOMER INFORMATION SHEET – NO. 13


HANDBRAKE BOWDEN CABLE INSTALLATION

DISC BRAKES

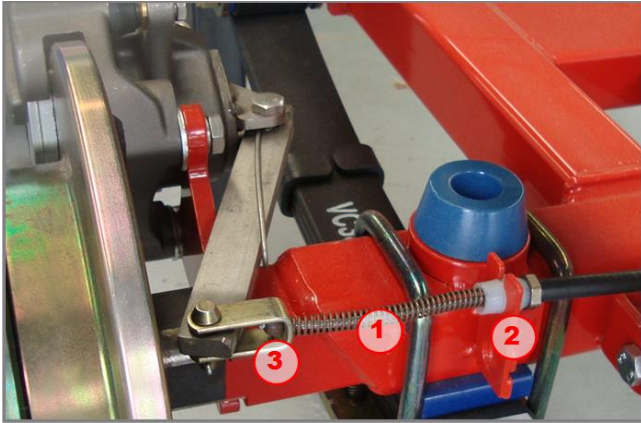

1. The Bowden Cable end with return spring is positioned towards the disc brake lever.
2. Place the white cable sleeve end into the bracket ensuring it is firmly locked in place.
3. While compressing the spring, place the clevis over the lever, insert the cross pin and secure in place using the split pin.

ELECTRIC DRUM BRAKES

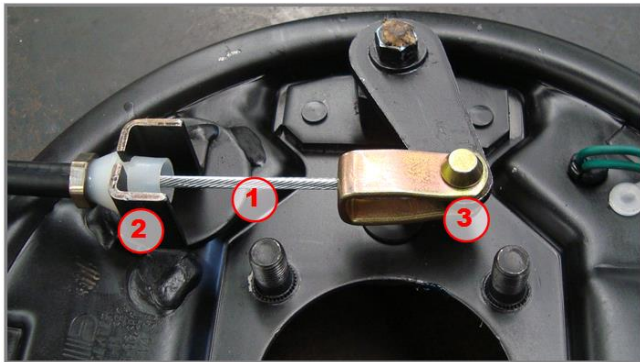

1. The Bowden Cable end without the return spring is positioned towards the brake drum.
2. Place the white cable sleeve end into the bracket ensuring it is firmly locked in place.
3. While compressing the spring, place the clevis over the lever, insert the cross pin and secure in place using the split pin.