

# ATX UNLEASHED UPGRADE KIT

FOR FITMENT TO EXISTING ATX SYSTEMS



## FITMENT INSTRUCTIONS

1. Secure the trailer/caravan on adequate capacity jack stands or take similar measures to ensure you can safely interact under the trailer/caravan without the risk of trailer/caravan movement.
2. Remove the existing shock absorbers and stone guards by removing the highlighted bolts.
3. Fit the M60 shock absorber starting with the top mounting bolt.
4. Fit the lower mounting bolt. Fastening the shock guard, spacer and shock absorber (spacer fitted between stone guard and arm mount).

This will require some compression of the shock absorber to align the fitment bolt. Setting the shock absorber to "Soft" will assist in this manual compression.

5. Fit the two remaining stone guard bolts to the front of guards.
6. Torque all bolts as per the specified Torque Requirements.

**NOTE:** Bolts used and their required torque settings may change over time. Please refer to the torque settings listed on the supplied bolt bag for the definitive requirement.

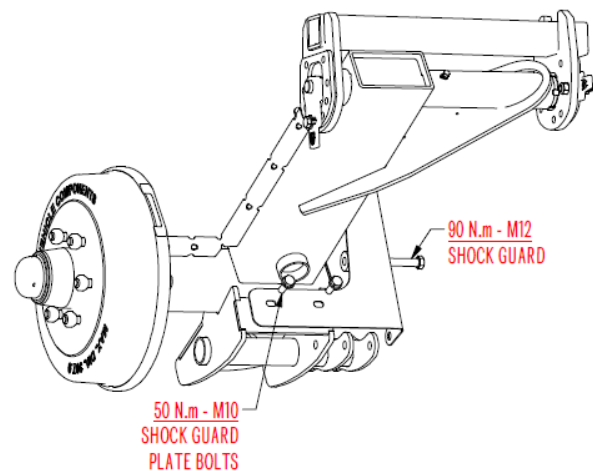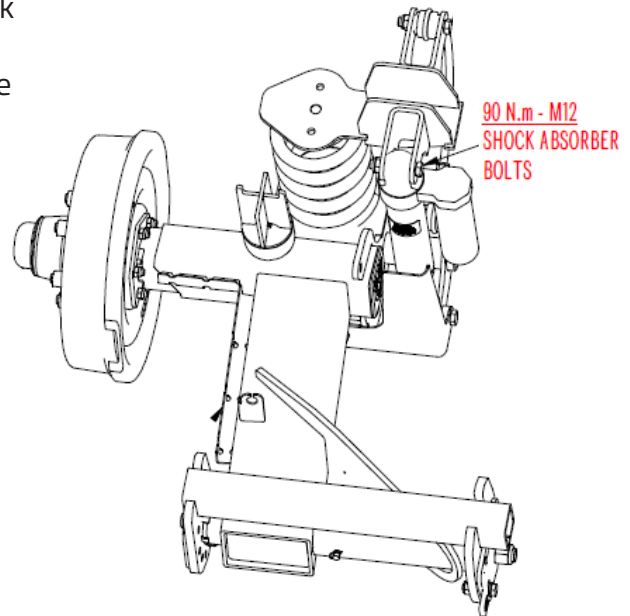

## MAINTENANCE

### **1<sup>ST</sup> 100km:**

Bolt torques checked and general inspection of shock absorbers for leaks or indications of unusual wear.

### **10,000km (or 12 monthly):**

Bolt torques checked and general inspection of shock absorbers for leaks or indications of unusual wear.

**NOTE:** If you are spending significant time off-road, or experiencing regular rough terrain we suggest more frequent maintenance checks.